


SEI Figure 2: Mode of access for personnel and materials

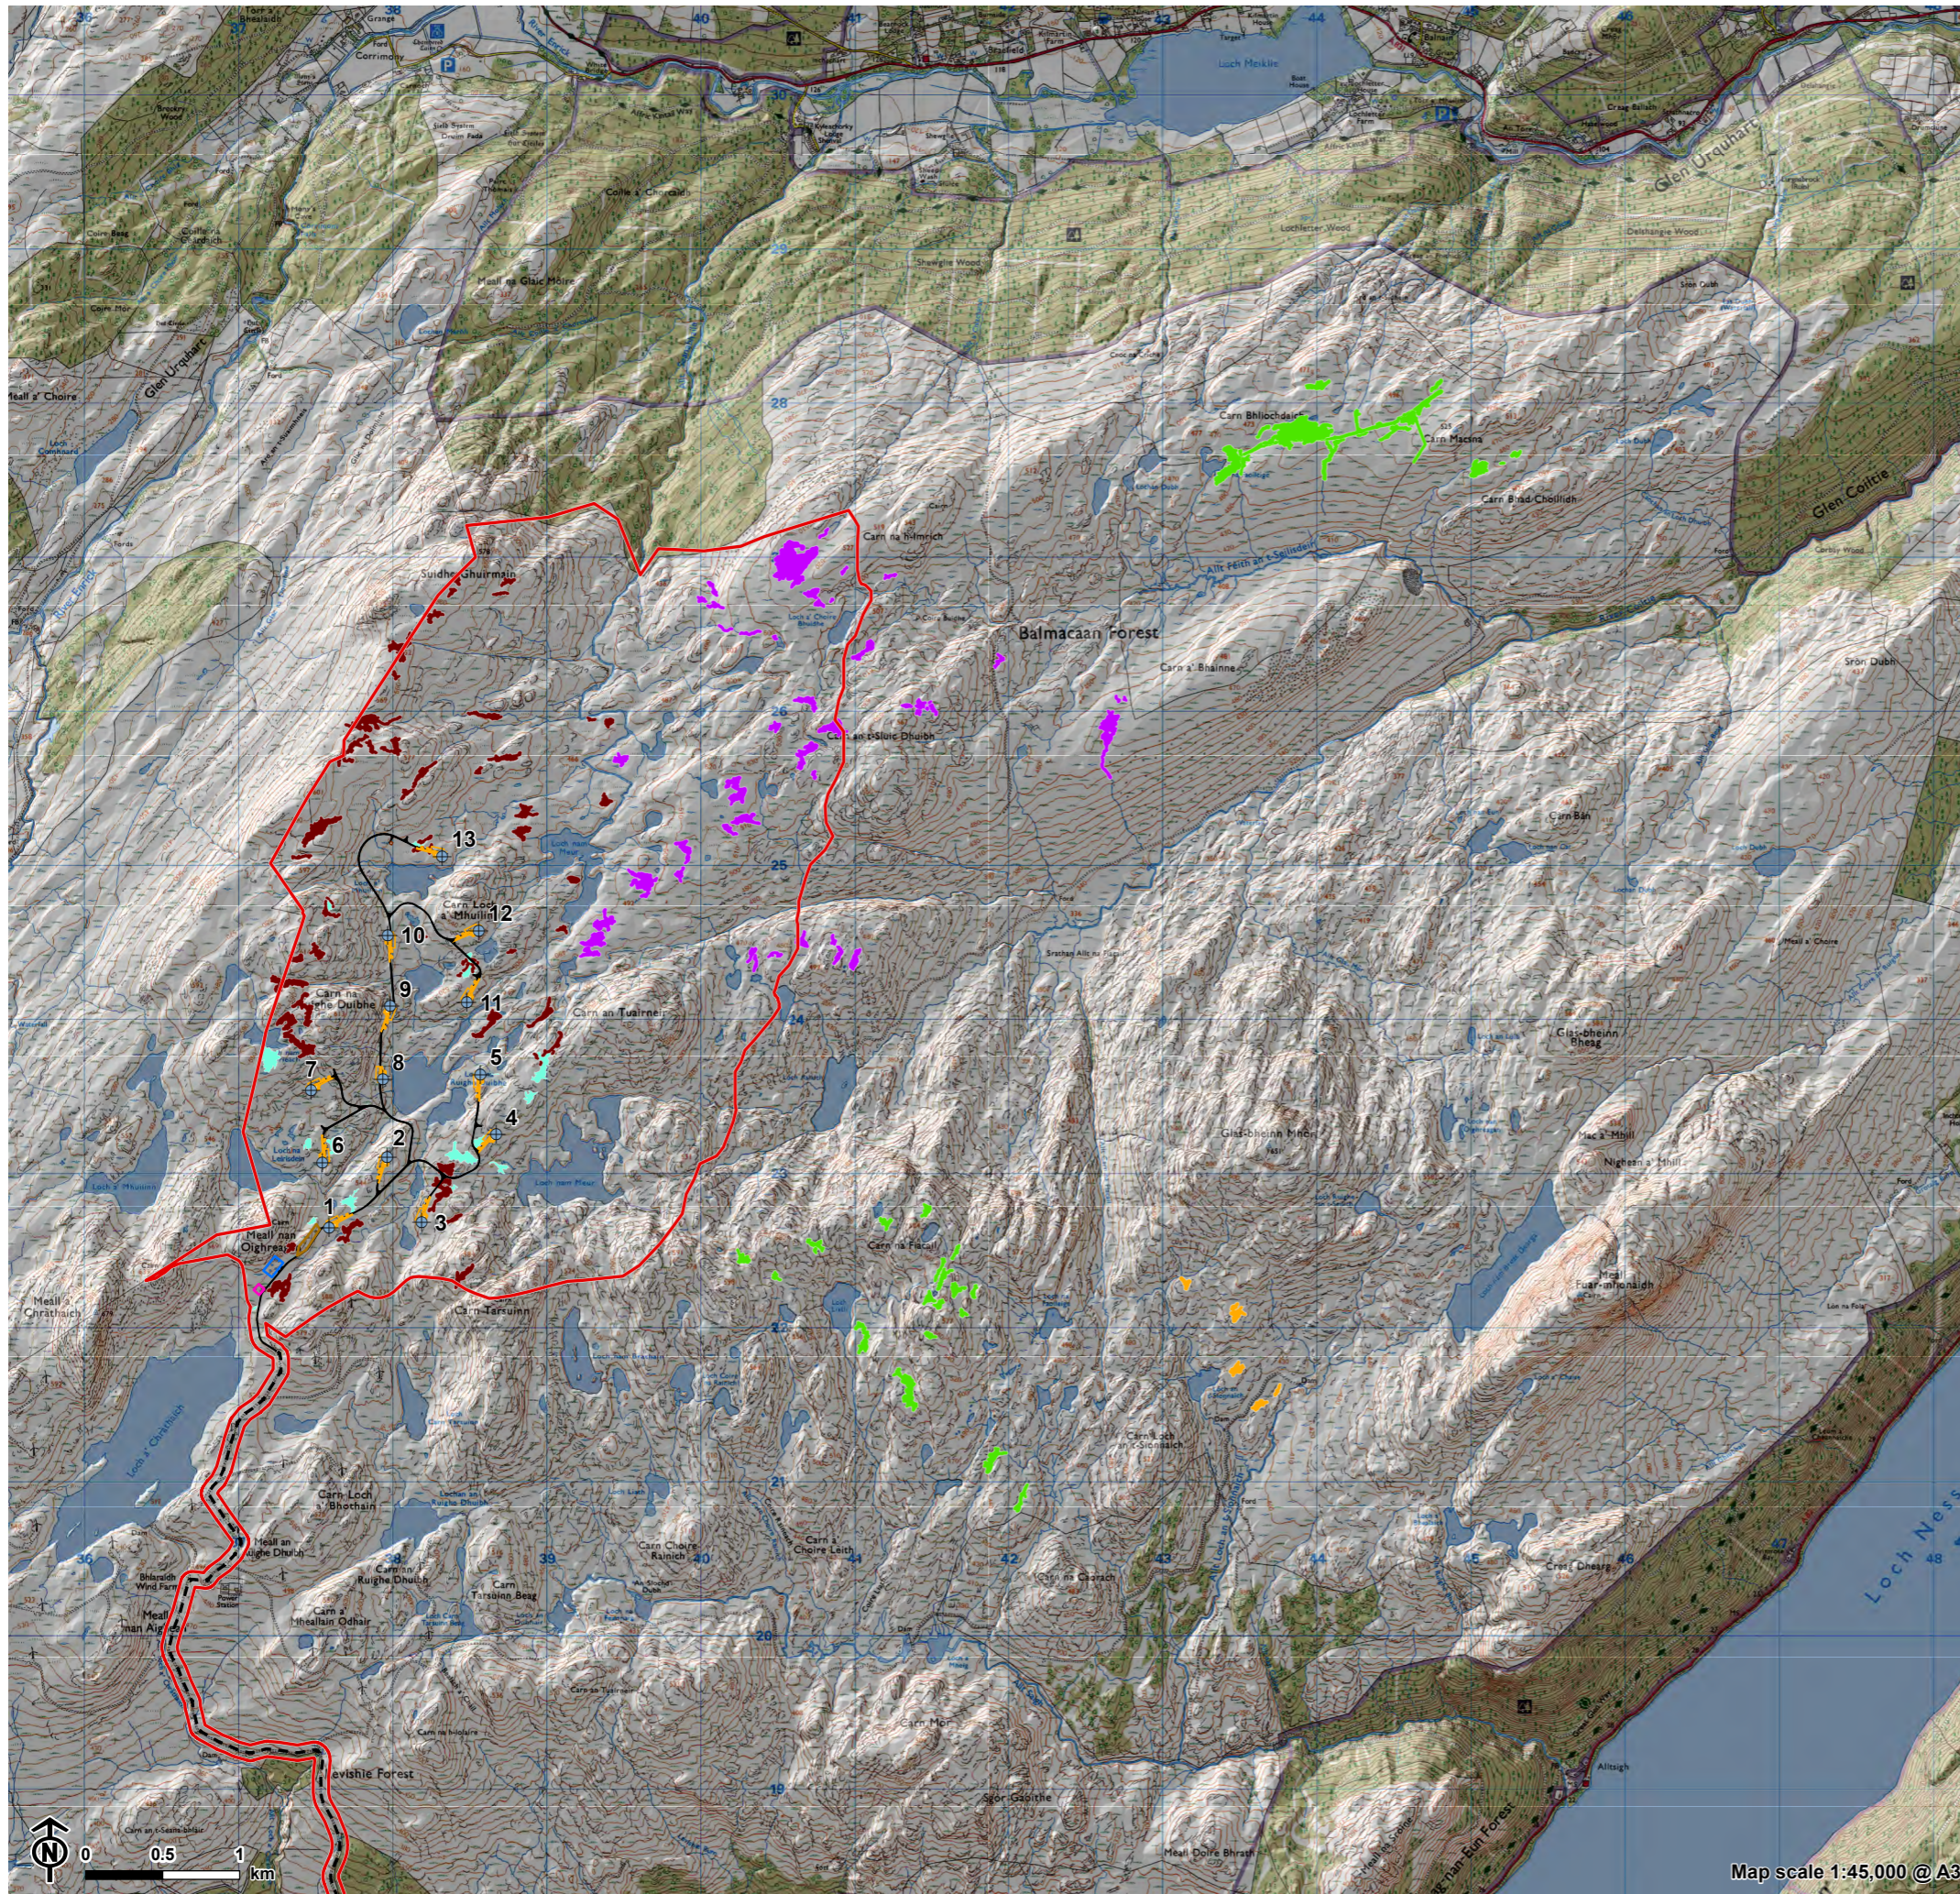

- Site boundary
  - Turbine
  - Construction compound
  - Substation
  - Borrow pit
  - Temporary hardstanding
  - Permanent hardstanding
  - Met mast
  - New access track
  - Existing access track
- Mode of access**
- Access via non wind farm tracks
  - Access via wind farm track network
  - Personnel access via argo track, materials via helicopter
  - Personnel and materials access via Argocat
  - Accessed via wind farm tracks

